

# Power supply and relay module for GIA20EB, GIA10N


## GNR 10



### Specification:

<b>Input voltage:</b>	220 - 240 V AC / 50 - 60 Hz
<b>Device supply:</b>	11VDC non-stabilised
<b>Transmitter supply:</b>	18VDC / max. 25mA, electrically insulated
<b>Relay output:</b>	2 volt-free changeover contacts
<b>max. current switched:</b>	10 A
<b>Switching capacity:</b>	<u>For alternating voltage:</u> max. 2400VA (240V, 10A, ohmic load); (cos $\varphi$ = 0.95) <u>For direct voltage:</u> max. 240W (24V, 10A, ohmic load)
<b>Working temperature:</b>	0 to 50°C
<b>Dimensions:</b>	61 x 96 mm (W x H)
<b>Mounting:</b>	universal foot base can be snapped on to all commercial DIN EN support rails.

### Terminal assignment:

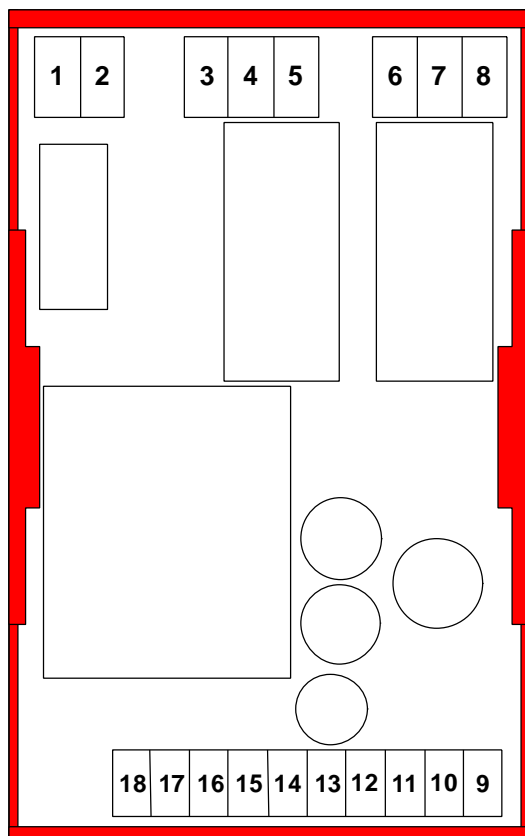

+Uv	S+	S-	-Uv	S-	S+	+Ub	GND	Rel1	Rel2
Transmitter					Device				

Terminal number	max. terminal area	Assignment
1 2	2.5 mm <sup>2</sup>	Supply voltage: 230V AC / 50Hz
3 4 5	2.5 mm <sup>2</sup>	Relay 1: normally closed contact Relay 1: input Relay 1: normally open contact
6 7 8	2.5 mm <sup>2</sup>	Relay 2: normally closed contact Relay 2: input Relay 2: normally open contact
9 10 11 12 13 14	1.0 mm <sup>2</sup>	Triggering relay 2 Triggering relay 1 Device - supply voltage - Device - supply voltage + Signal + Signal -
15 16 17 18	1.0 mm <sup>2</sup>	Transmitter supply -Uv Signal - Signal + Transmitter supply +Uv




**GREISINGER** electronic GmbH

D - 93128 Regenstauf, Hans-Sachs-Straße 26


Phone: 0049 9402/9383-0, Fax.: 0049 9402/9383-33, e-mail: info@greisinger.de

## Examples for connections to an GIA20EB:


### Connection of a 0-1(10)V transmitter (3-wire):

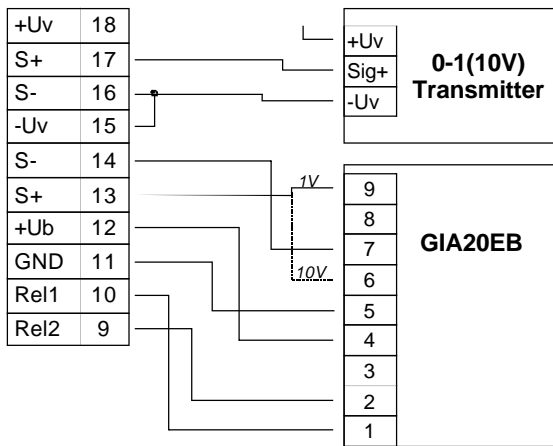


### Connection of a 0-1(10)V transmitter (4-wire):

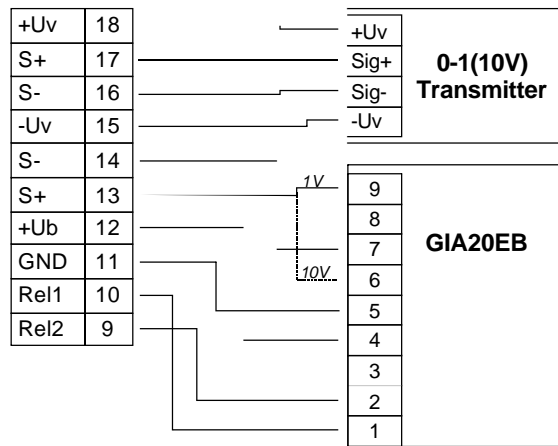


### Connection of a 4-20mA transmitter (2-wire):

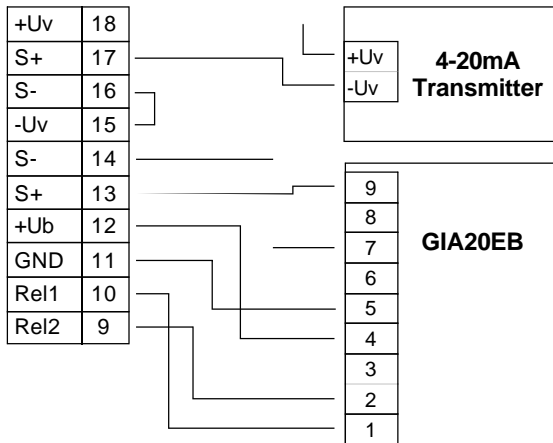


### Connection of a 0(4)-20mA transmitter (3-wire):

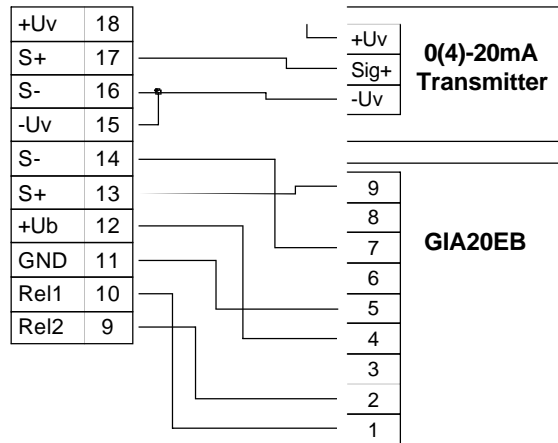

### Connection of a frequency generator (counter etc.):

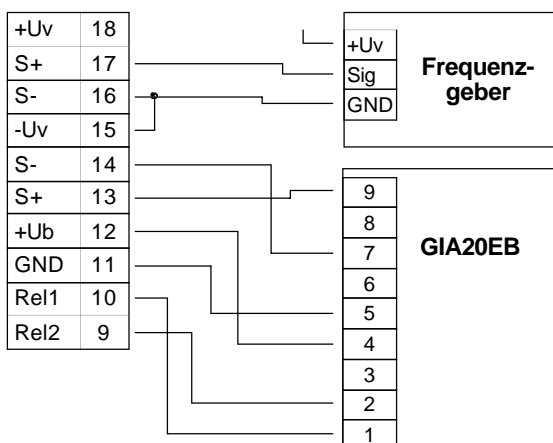


### Connection of a resistance sensor (2-wire):

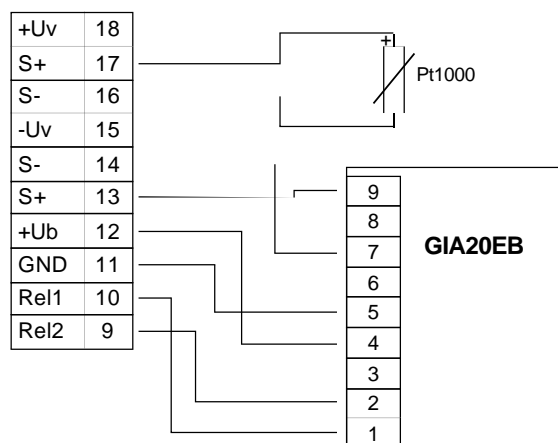


**Examples for connections to an GIA10N:**


**Connection of a 0-1(10)V transmitter (3-wire):**

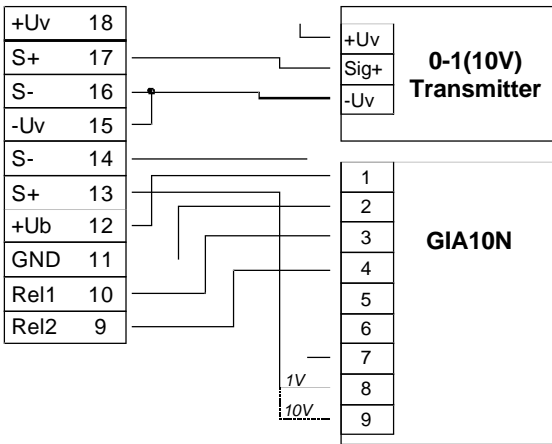


**Connection of a 0-1(10)V transmitter (4-wire):**

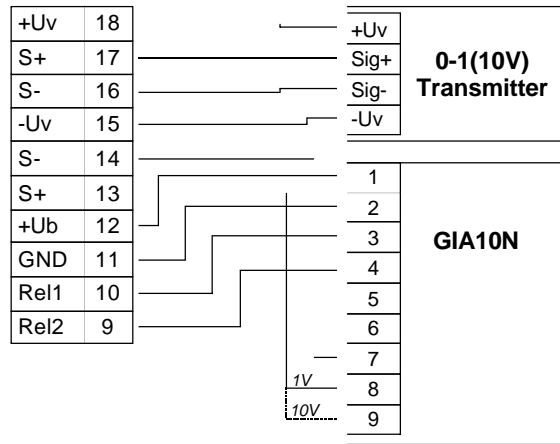


**Connection of a 4-20mA transmitter (2-wire):**

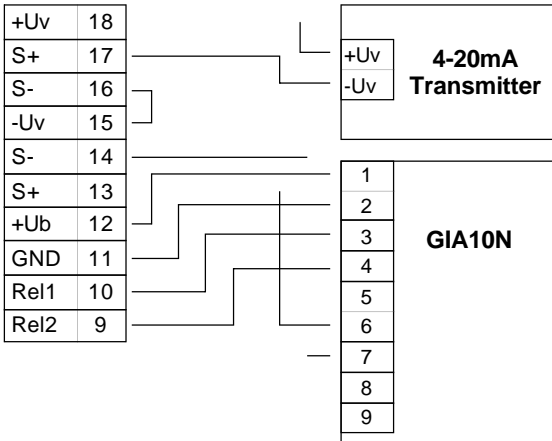


**Connection of a 0(4)-20mA transmitter (3-wire):**

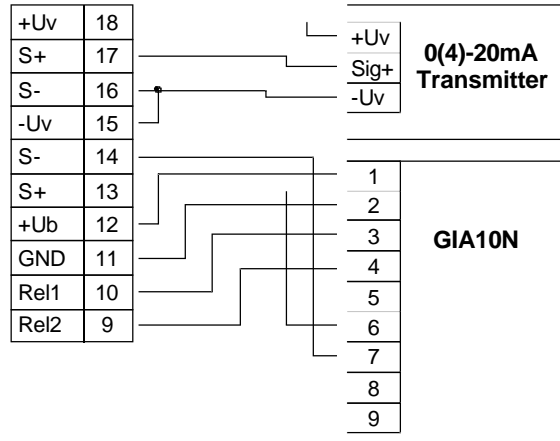

**Connection of a frequency generator (counter etc.):**

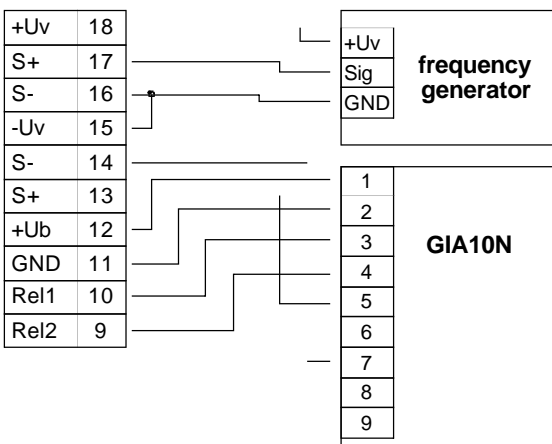

**Connection of a resistance sensor:**

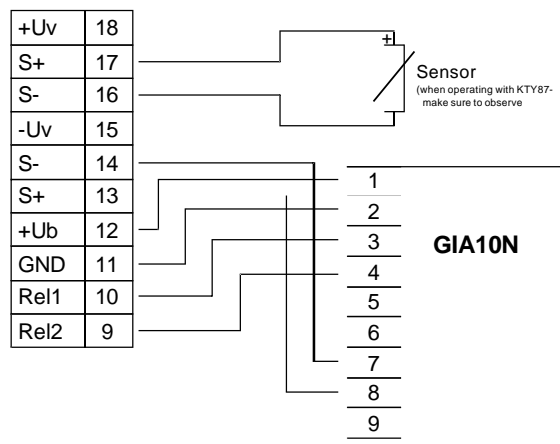

## **Safety instructions:**

This device has been designed and tested in accordance with the safety regulations for electronic devices. However, its trouble-free operation and reliability cannot be guaranteed unless the standard safety measures and special safety advises given in this manual will be adhered to when using the device.

1. Trouble-free operation and reliability of the device can only be guaranteed if the device is not subjected to any other climatic conditions than those stated under "Specification". If the device is transported from a cold to a warm environment condensation may cause in a failure of the function. In such a case make sure the device temperature has adjusted to the ambient temperature before trying a new start-up.
2. General instructions and safety regulations for electric, light and heavy current plants, including domestic safety regulations (e.g. VDE), have to be observed.
3. Electric connection and commissioning of the device must be carried out of trained and skilled personnel. Wrong connection may lead to the destruction of the device, in which cas we cannot assume any warranty.
3. If device is to be connected to other devices (e.g. via PC) the circuitry has to be designed most carefully. Internal connection in third party devices (e.g. connection GND and earth) may result in not-permissible voltages impairing or destroying the device or another device connected.
4. If there is a risk whatsoever involved in running it, the device has to be switched off immediately and to be marked accordingly to avoid re-starting.  
Operator safety may be a risk if:
  - there is visible damage to the device
  - the device is not working as specified
  - the device has been stored under unsuitable conditions for a longer time.In case of doubt, please return device to manufacturer for repair or maintenance.